

## **Selector Valve**

QXZ/17.2



## 1 Overview

The selector valve is mounted on the pressure manifold; the inlet is connected to the manifold, while the outlet is connected to the extinguishing agent pipeline.

When the fire occurs, the N2 goes into the drive cylinder of the selector valve, push the piston in the cylinder to open the selector valve, at the same time N2 open the container valve and release the fire extinguishing agent, the agent goes through the selection valve into the protected area, and put out fire.

## **2 Technical Parameter**

Model	Nominal diameter	Connect thread	Nominal working pressure
QXZ32/17.2	32	Rc1¹/₄¹′	17.2MPa
QXZ40/17.2	40	Rc1 <sup>1</sup> / <sub>2</sub> ''	17.2MPa
QXZ50/17.2	50	Rc2'′	17.2MPa
QXZ65/17.2	65	Rc2 <sup>1</sup> / <sub>2</sub> "	17.2MPa
QXZ80/17.2	80	Rc3''	17.2MPa
QXZ100/17.2	100	Flange connection	17.2MPa
QXZ125/17.2	125	Flange connection	17.2MPa
QXZ150/17.2	150	Flange connection	17.2MPa